




METAL ROOFING

DShingle XD Direct[®]-to-Deck

Install Shingle XD[®] on standard roof slopes of 4:12 and greater.

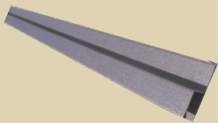

Short Course Clip
(to start panel after a short course)



Ridge Vent



XD[®] Debris Guard



Flat Sheet



Corrosion-resistant Screws

panel vents should be installed on the last full course below the ridge, and no more than 4 feet down from the peak of the roof facet. Panel vents should NOT be used for air intake.

Use 2 x 2s and / or 1 x 2s at hips and ridges. Additional build up may be required depending on roof slope.